



# Duelpad Mini Quick Start Guide

## »»» Quick Guide

Top:

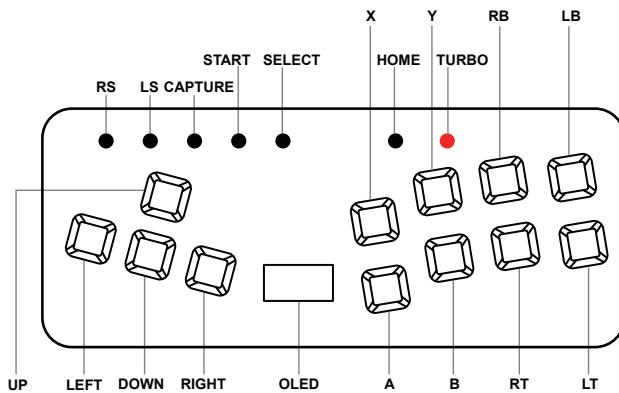


Bottom:

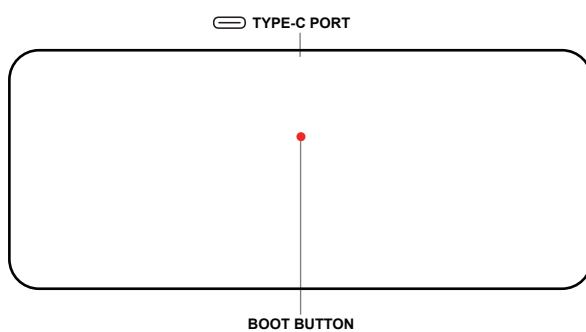

## »»» Input Modes

To change input modes, please press and hold down one of the following buttons before power on the gamepad.

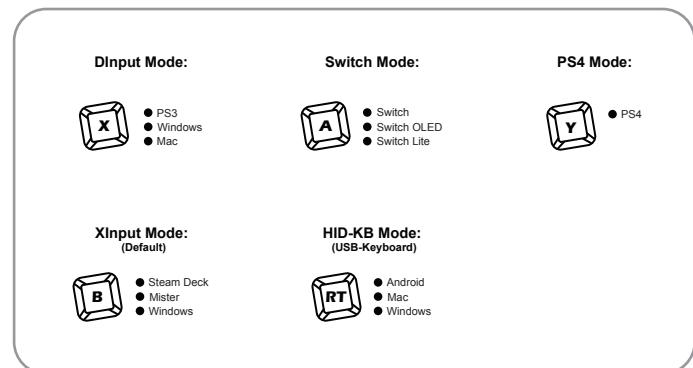

## »»» SOCD Modes

To change **SOCD modes**, please hold down **HOME + START** and press one of the following buttons.

Note: The SOCD mode's default setting is SOCD-N.

### Up Priority Mode: (HOME + START+ UP)

Button Pressed	Result
Left + Right	Neutral
Right + Left	Neutral
Up + Down	Up
Down + Up	Up

### Neutral Mode: (HOME + START+ DOWN)

Button Pressed	Result
Left + Right	Neutral
Right + Left	Neutral
Up + Down	Neutral
Down + Up	Neutral

### Last Input Priority Mode: (HOME + START+ LEFT)

Button Pressed	Result
Left + Right	Right
Right + Left	Left
Up + Down	Down
Down + Up	Up

## »»» Turbo Modes

To enable Turbo mode, please hold down the TURBO button and press the corresponding button, including X/Y/RB/LB and A/B/RT/LT. The speed can be adjusted from 1 to 60 times per second.

Note: Any changes made to the gamepad's settings will not be saved once it loses power. The turbo mode's default speed is 15 times per second.

**Increase Speed (TURBO + UP)**

**Lower the Speed (TURBO + DOWN)**

## »»» DPad Modes Settings

To change D-pad modes, Please hold down **SELECT + START** and press one of the following buttons.

D-Pad Digital(Default): **SELECT+START+ DOWN**

Left Analog Stick: **SELECT+START+ LEFT**

Right Analog Stick: **SELECT+START+ RIGHT**

## »»» RGB LEDs Settings

To change RGB LED Animations, please hold down Start + Select and press one of the following buttons

**SELECT + START + X** Next Animation

**SELECT + START + A** Previous Animation

**SELECT + START + Y** Brightness Up

**SELECT + START + B** - Brightness Down

**SELECT + START + RB** LED Parameter Up

**SELECT + START + RT** - LED Parameter Down

**SELECT + START + LB** Pressed Parameter Up

**SELECT + START + LT** Pressed Parameter Down

## »»» Web Configuration

The gamepad is built-in a local web server to set up the configurations. please follow these steps to access the webpages.

1.Press and hold **START** before plug the gamepad into a computer with usb type-c cable.

2.Open a browser and navigate to <http://192.168.7.1>. Then, you can proceed with the gamepad settings



## Firmware Updates

1. Download the latest firmware from [www.duelpad.com/support](http://www.duelpad.com/support).
2. Hold down the **BOOT** button on the gamepad, then plug it into the computer using a type-c cable. Afterwards, the **RPI-RP2 drive** will appear on your computer.
3. Then, copy the latest firmware to the drive to complete the update.
4. If the update is successful, the gamepad will restart and be detected as a controller again.



## Buttons Mapping

Duelpad Mini	GP2040	XInput	Switch	PS3	PS4	DInput	Arcade	Keyboard (HID-KB)
A	B1	A	B	Cross	Cross	2	K1	Left Shift
B	B2	B	A	Circle	Circle	3	K2	Z
X	B3	X	Y	Square	Square	1	P1	Left Control
Y	B4	Y	X	Triangle	Triangle	4	P2	Left Alt
LB	L1	LB	L	L1	L1	5	P4	C
RB	R1	RB	R	R1	R1	6	P3	Spacebar
LT	L2	LT	ZL	L2	L2	7	K4	V
RT	R2	RT	ZR	R2	R2	8	K3	X
Select	S1	Back	Minus	Select	Share	9	Coin	5
Start	S2	Start	Plus	Start	Options	10	Start	1
LS	L3	LS	LS	L3	L3	11	LS	Equal
RS	R3	RS	RS	R3	R3	12	RS	Minus
Home	A1	Guide	HOME	PS	PS	13	Home	9
Capture	A2		Capture		Touchpad	14		F2